



CUT BODY STRIPES FROM PLAN AND CEMENT TO COMPLETED FUSELAGE

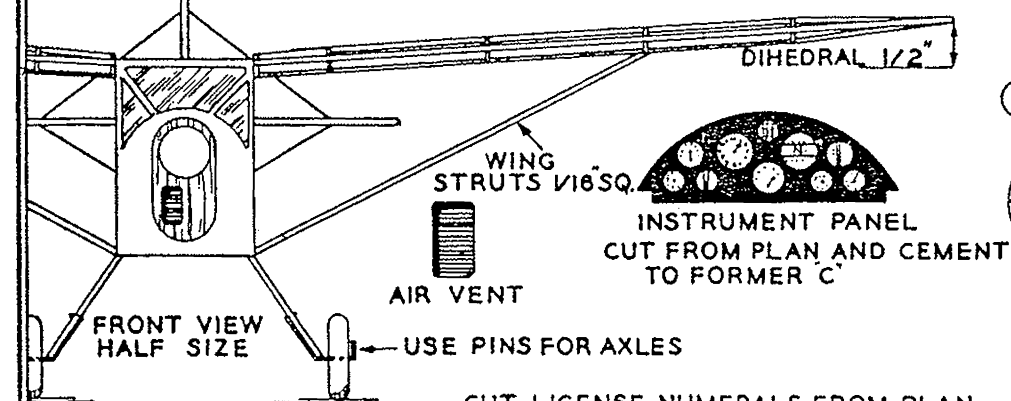

CUT LICENSE NUMERALS FROM PLAN CEMENT TO TOP OF RIGHT WING

**NC27190**


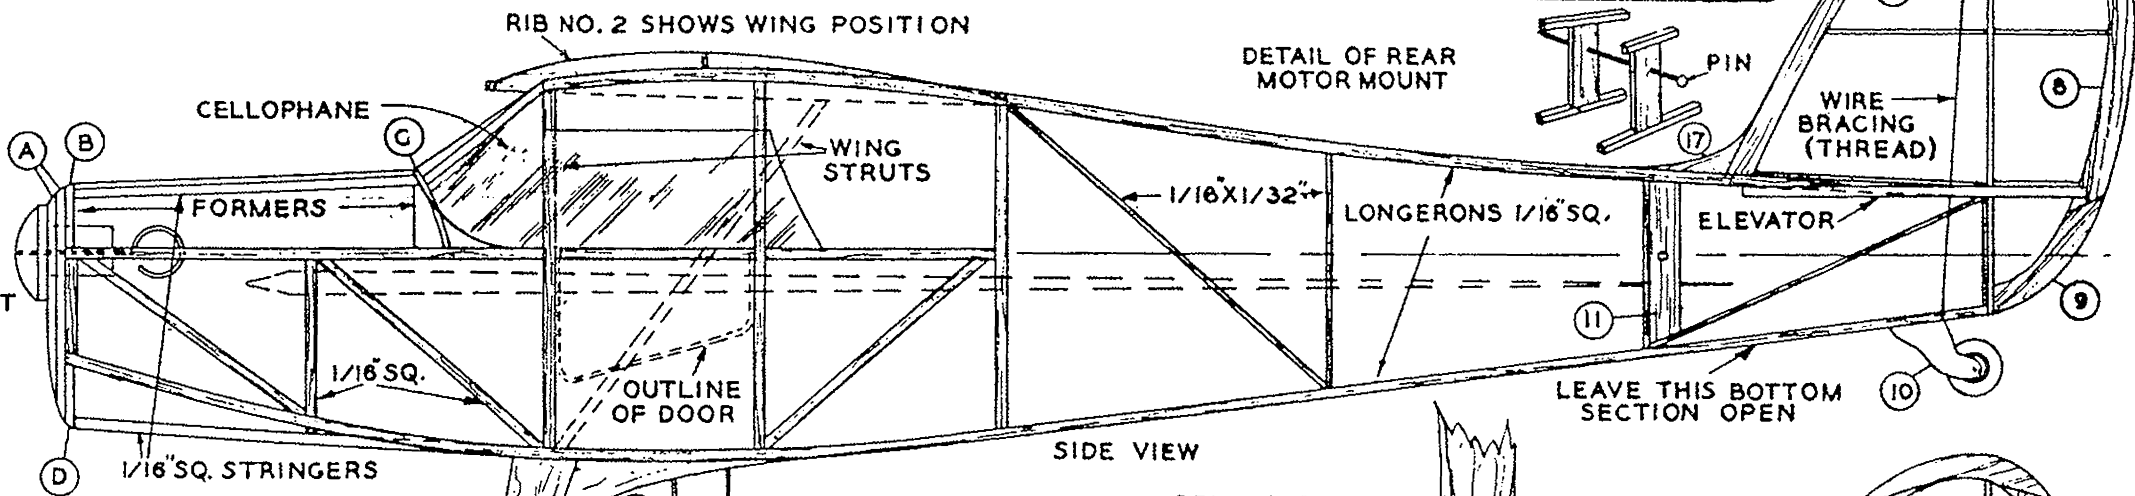


CEMENT PIECES 'A' TOGETHER AND SANDPAPER TO SHAPE SHOWN IN TOP & SIDE VIEWS

BEND LIGHT WIRE TO SHAPE FOR STEP

BREAK A RAZOR BLADE AS SHOWN AND USE FOR CUTTING OUT SMALL BALSA PARTS

BEND END OF PROP SHAFT AND FORCE BACK INTO PROP

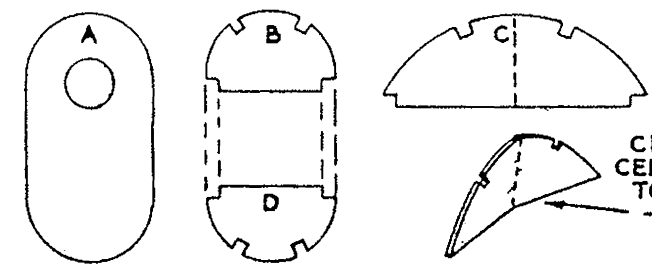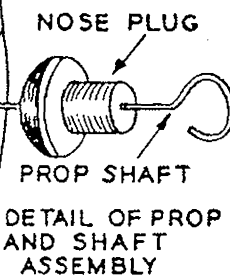

CRACK FORMER 'C' ALONG CENTER LINE AND BEND TO ANGLE SHOWN IN TOP VIEW - SMEAR CEMENT OVER FRACTURE

- NOTES -

NOT CEMENT NOSE PLUG IN POSITION

COVER WINGS AND ELEVATOR ON TOP SIDE ONLY - RUDDER ON LEFT SIDE ONLY

CUT LONGEST LENGTHS OF 1/16" SQ. FIRST

